



INSTALLATION GUIDE

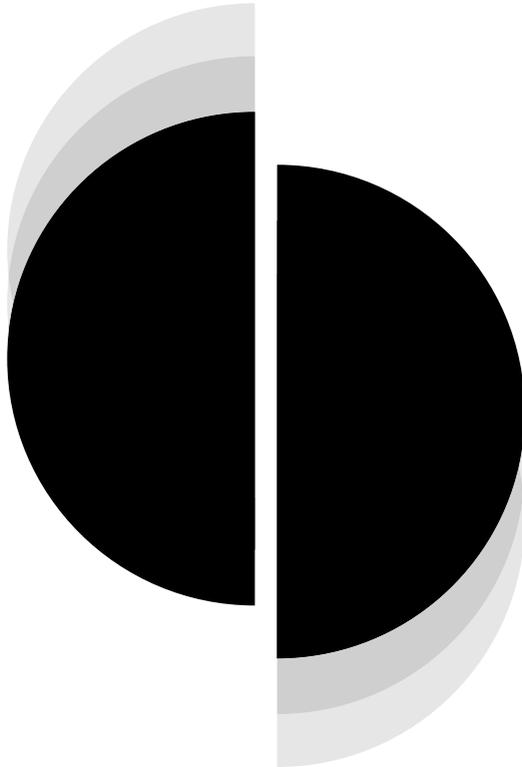


LEVER SET

LATCH

Inside the Box.

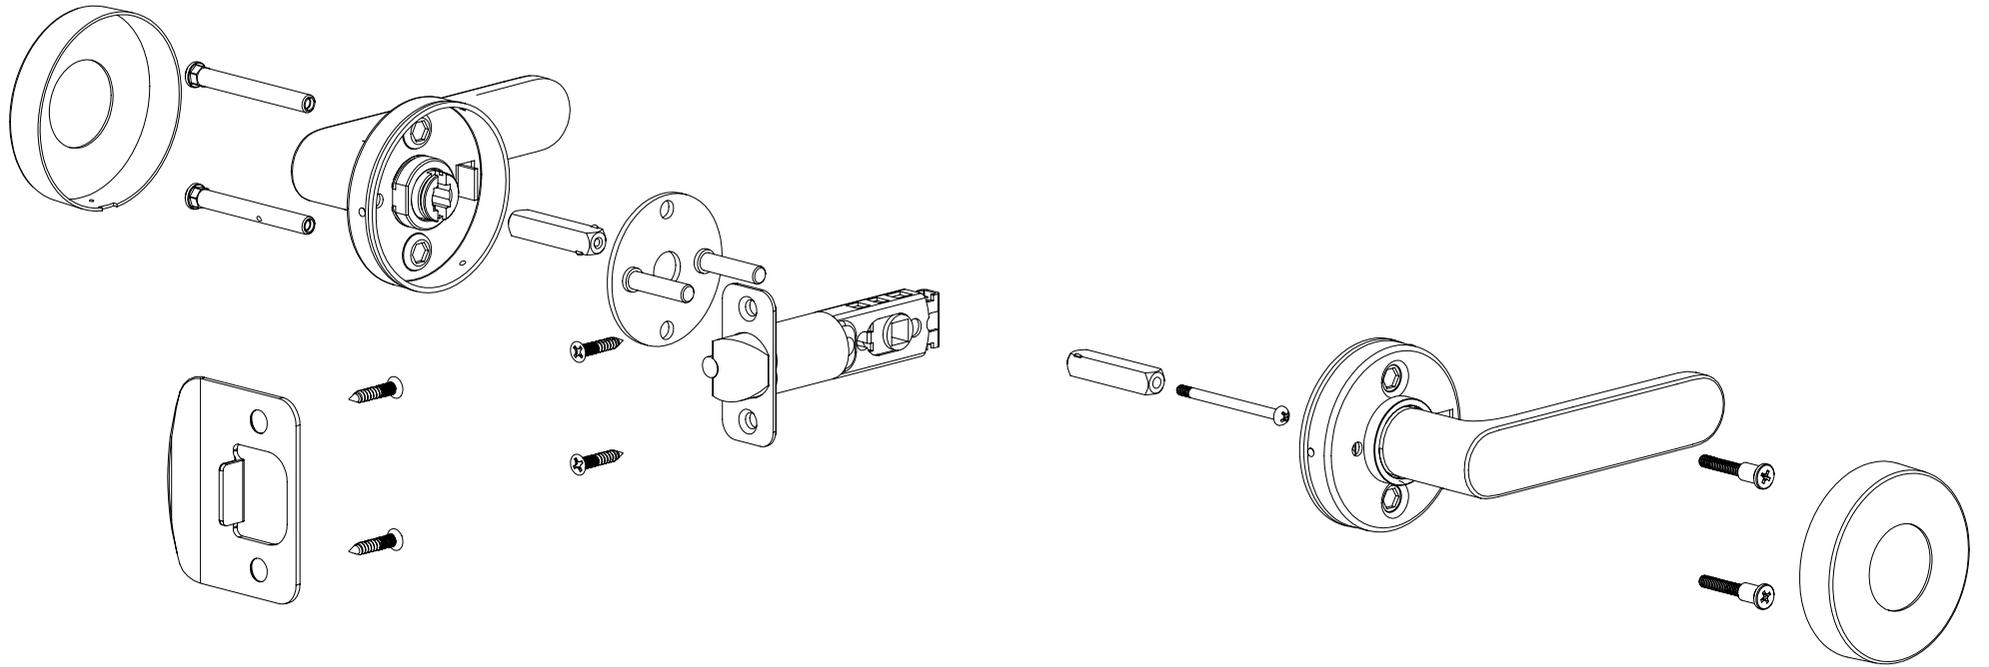

Hardware.



X 4



X 1



X 2

For doors
with **1 - 3/4"**
thickness.



X 2

For doors
with **1 - 3/8"**
thickness.



X 2

PREPARATION

Measure.


Select the correct cutsheet according to the door thickness.

Identify if your door has backset A or backset B with the



cutsheet. **Reuse the cutsheet you used for installing Latch**

C Series.





Thicker Doors.

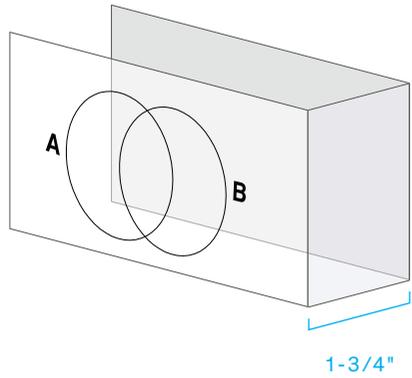

Thinner Doors.

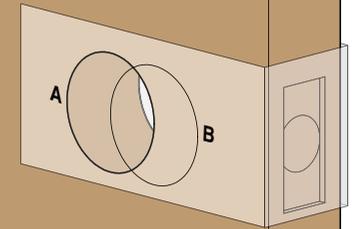
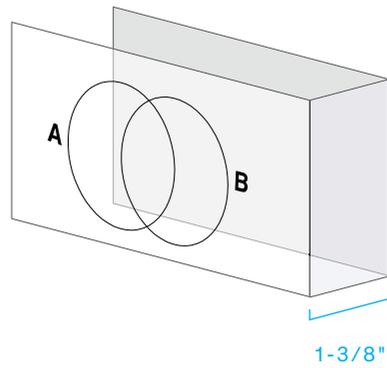


Extend or retract the latchbolt depending on the backset type.

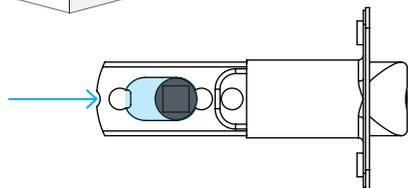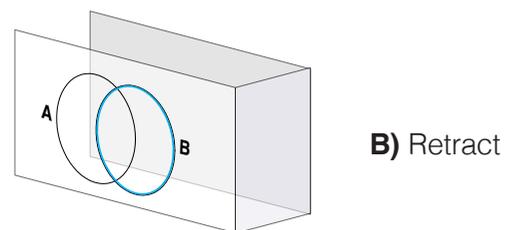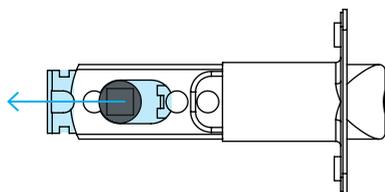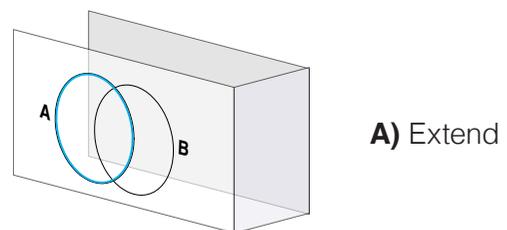


INSTALLATION

1 Insert the latchbolt depending on the swing of your door.

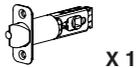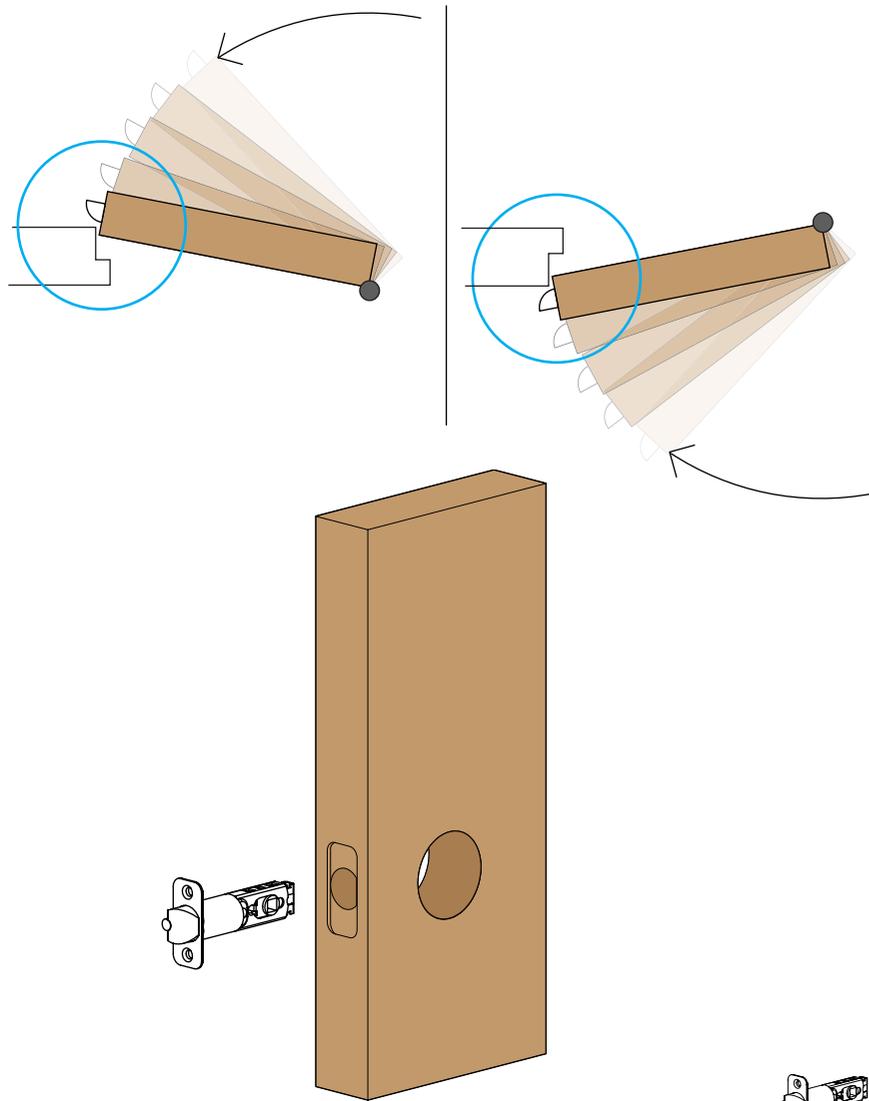


2 Insert the bracket from the outside of the door all the way in.

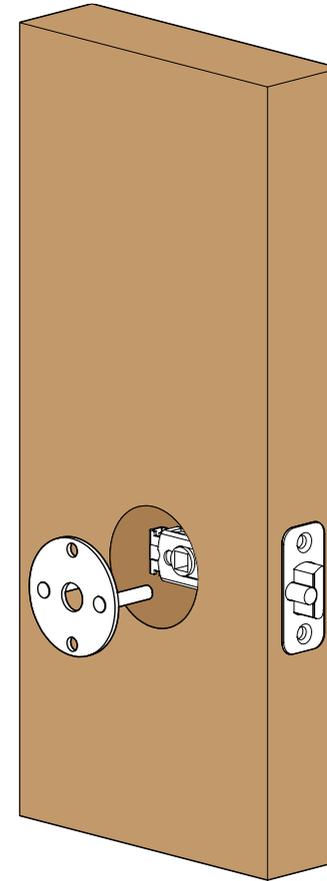


Important

Your door might look different from the installation example used throughout the guide due to handing and swing direction.

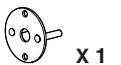


3 Screw the latchbolt in.

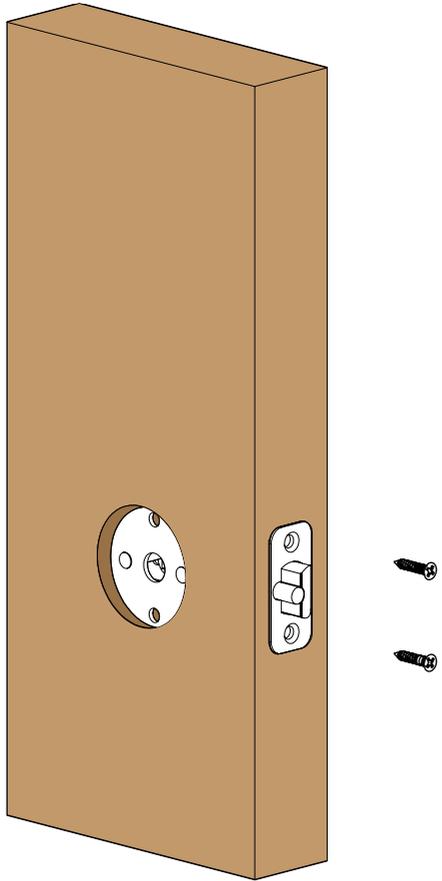

 x 2

4 Assemble the spindle set using a screwdriver.

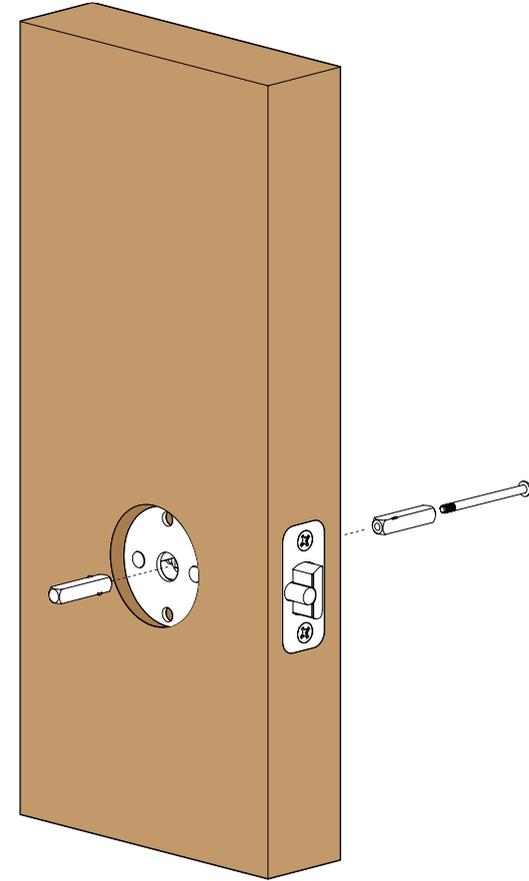


Important

Make sure that all screws are installed from the interior to prevent tampering.


 x 1  x 1  x 1

5 Insert the two levers.

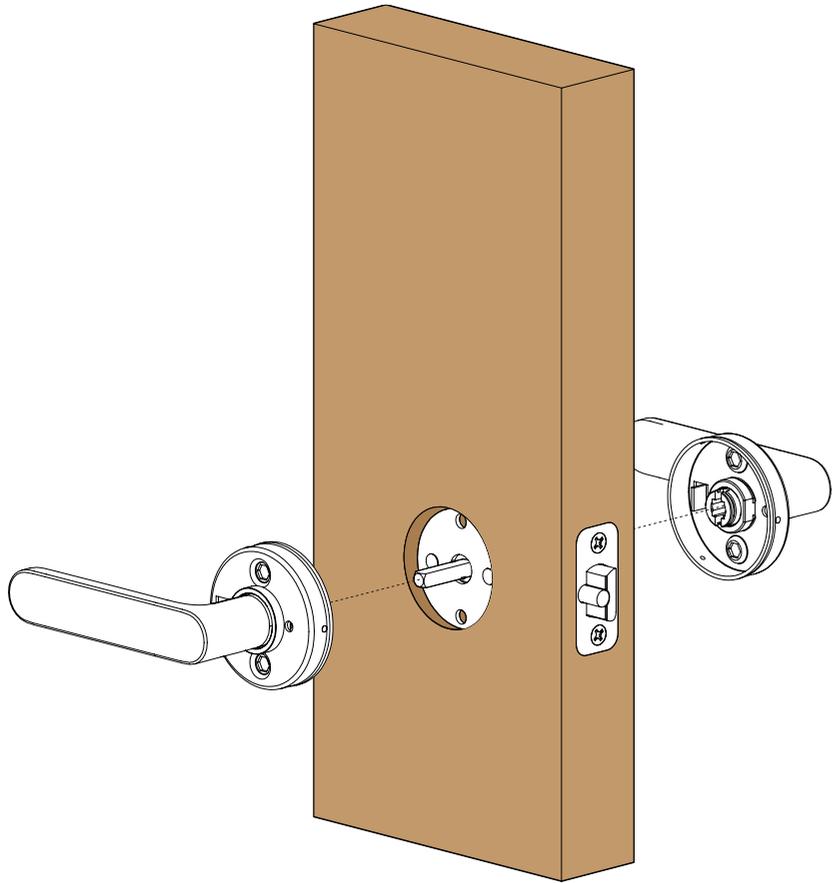


6 Screw the levers together tightly.

Choose the post set depending on your door's thickness. ▶

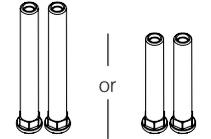


Thicker Doors. (1 - 3/4")
Thinner Doors. (1 - 3/8")

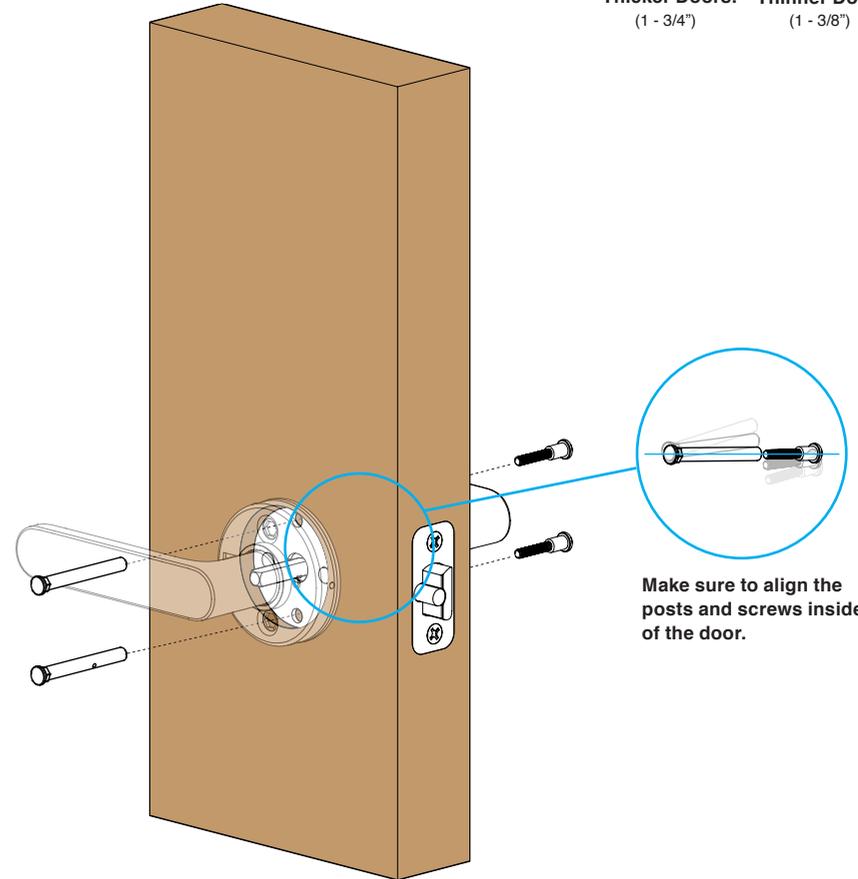


Make sure to align the posts and screws inside of the door.

Important

Make sure that all screws are installed from the interior to prevent tampering.




7 Place the covers by pressing firmly against the door.

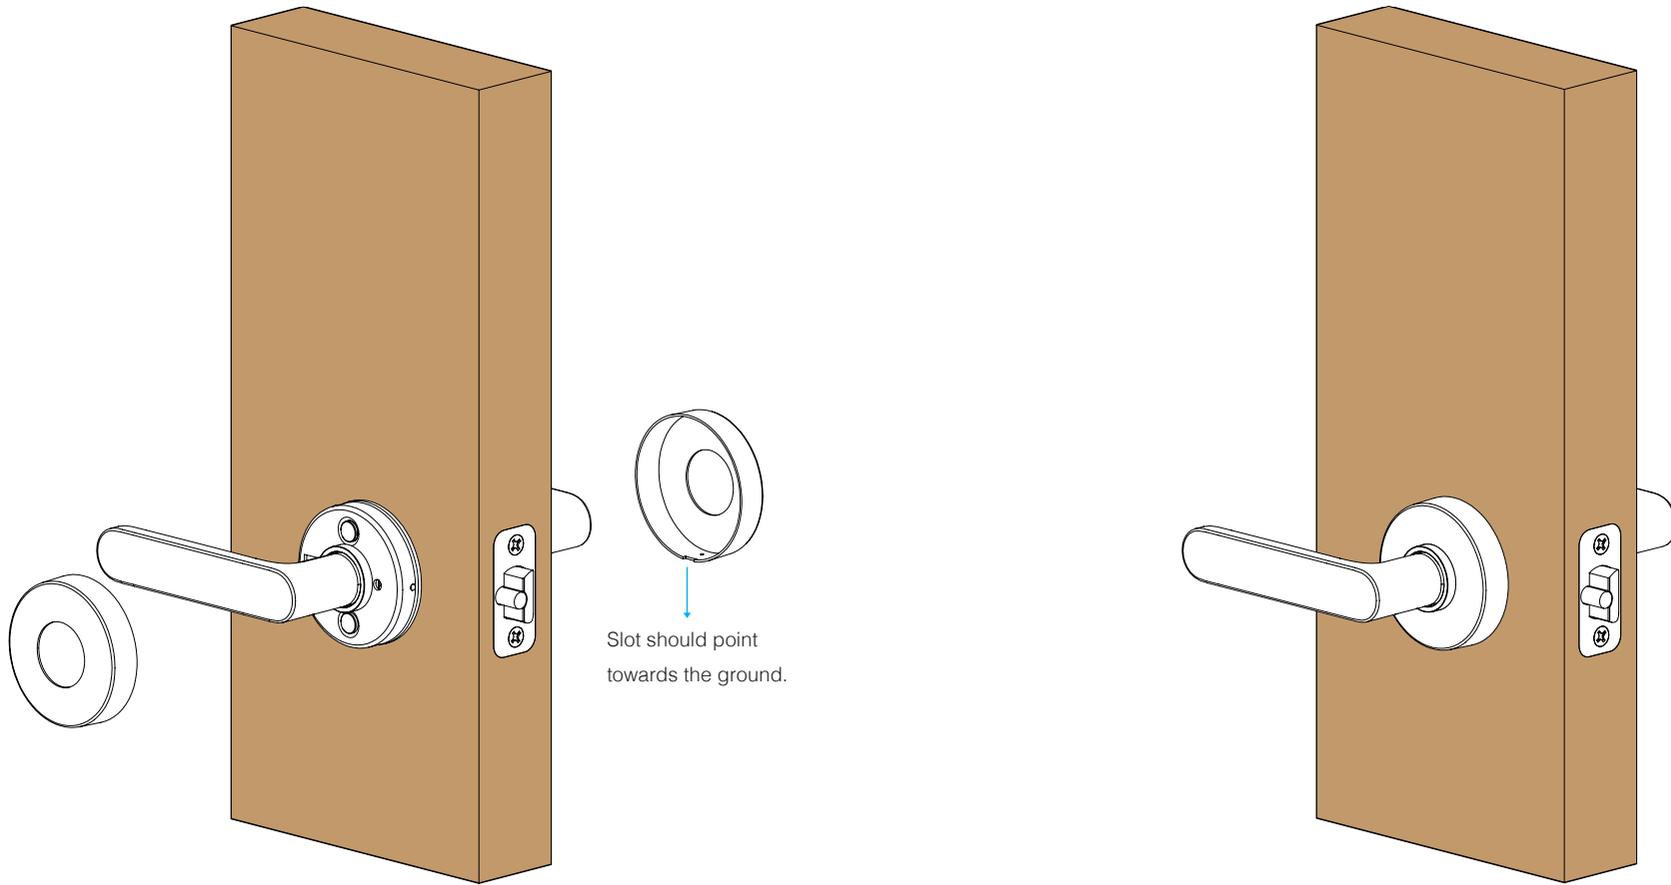

 x 2

We are here for you.

Visit support.latch.com if you have any questions during install.

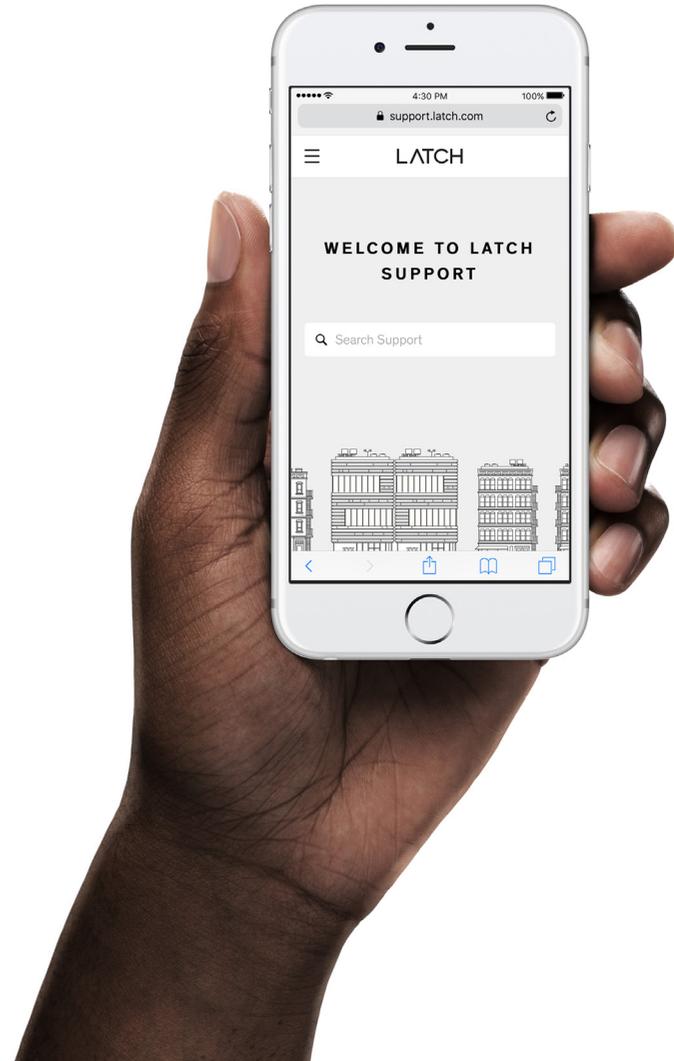

LATCH

v.3.0