
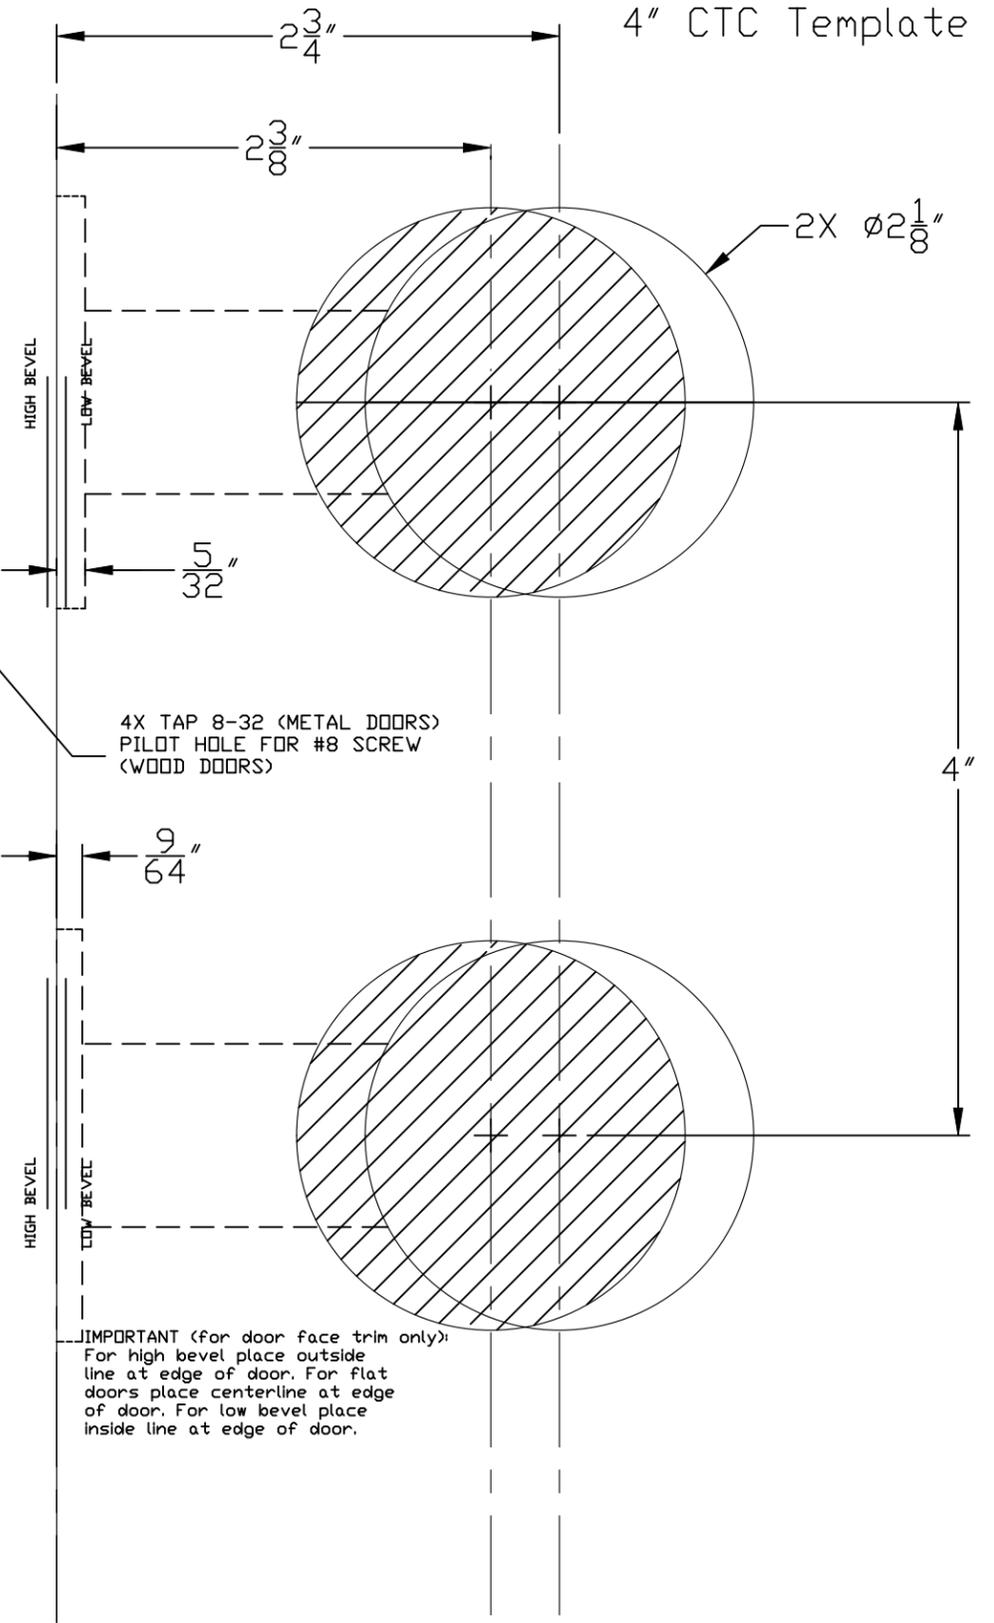
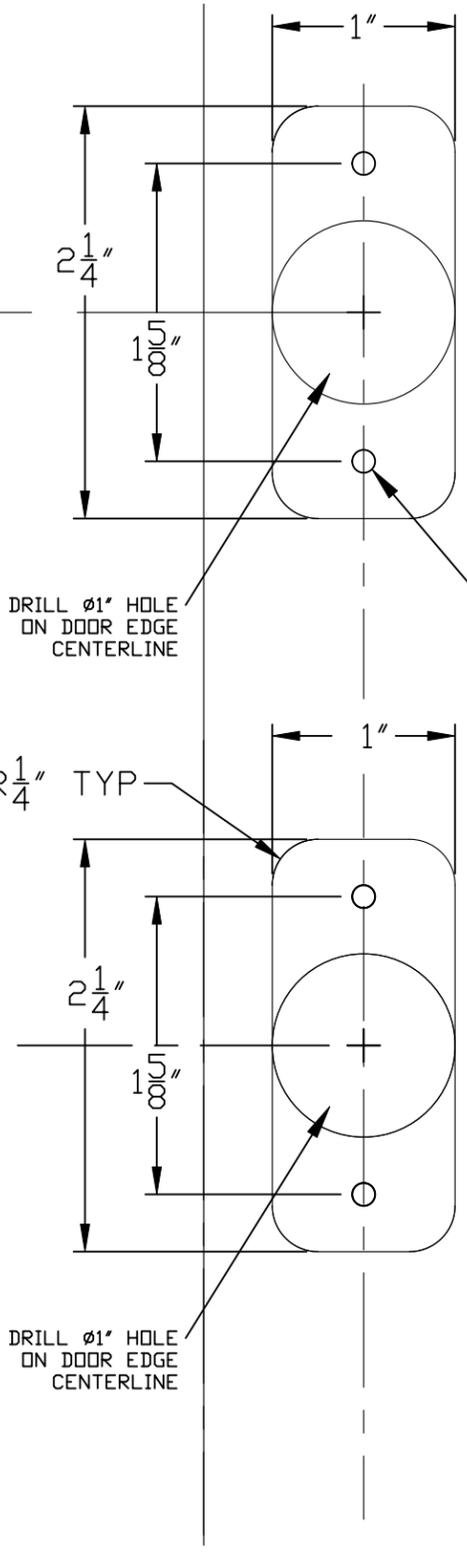


5/64" DEEP FOR METAL DOORS
(FOR WOOD DOORS: 13/64" DEEP
STRIKE & SECURITY PLATE THICKNESS)

*** STRIKE DUST BOX-
USE THESE DIMENSIONS
FOR STRIKE CUTOUT
WHEN USING A DUST
BOX.


* IMPORTANT:
STOP FOR DOOR IS MEASURED
FROM THE ACTUAL STOP-
COMPRESSED WEATHER STRIP OR
ANY DAMPENING DEVICE
INCLUDED- THE STOP DIMENSION
(7/8") MUST BE MAINTAINED
FROM THE ACTUAL STOP

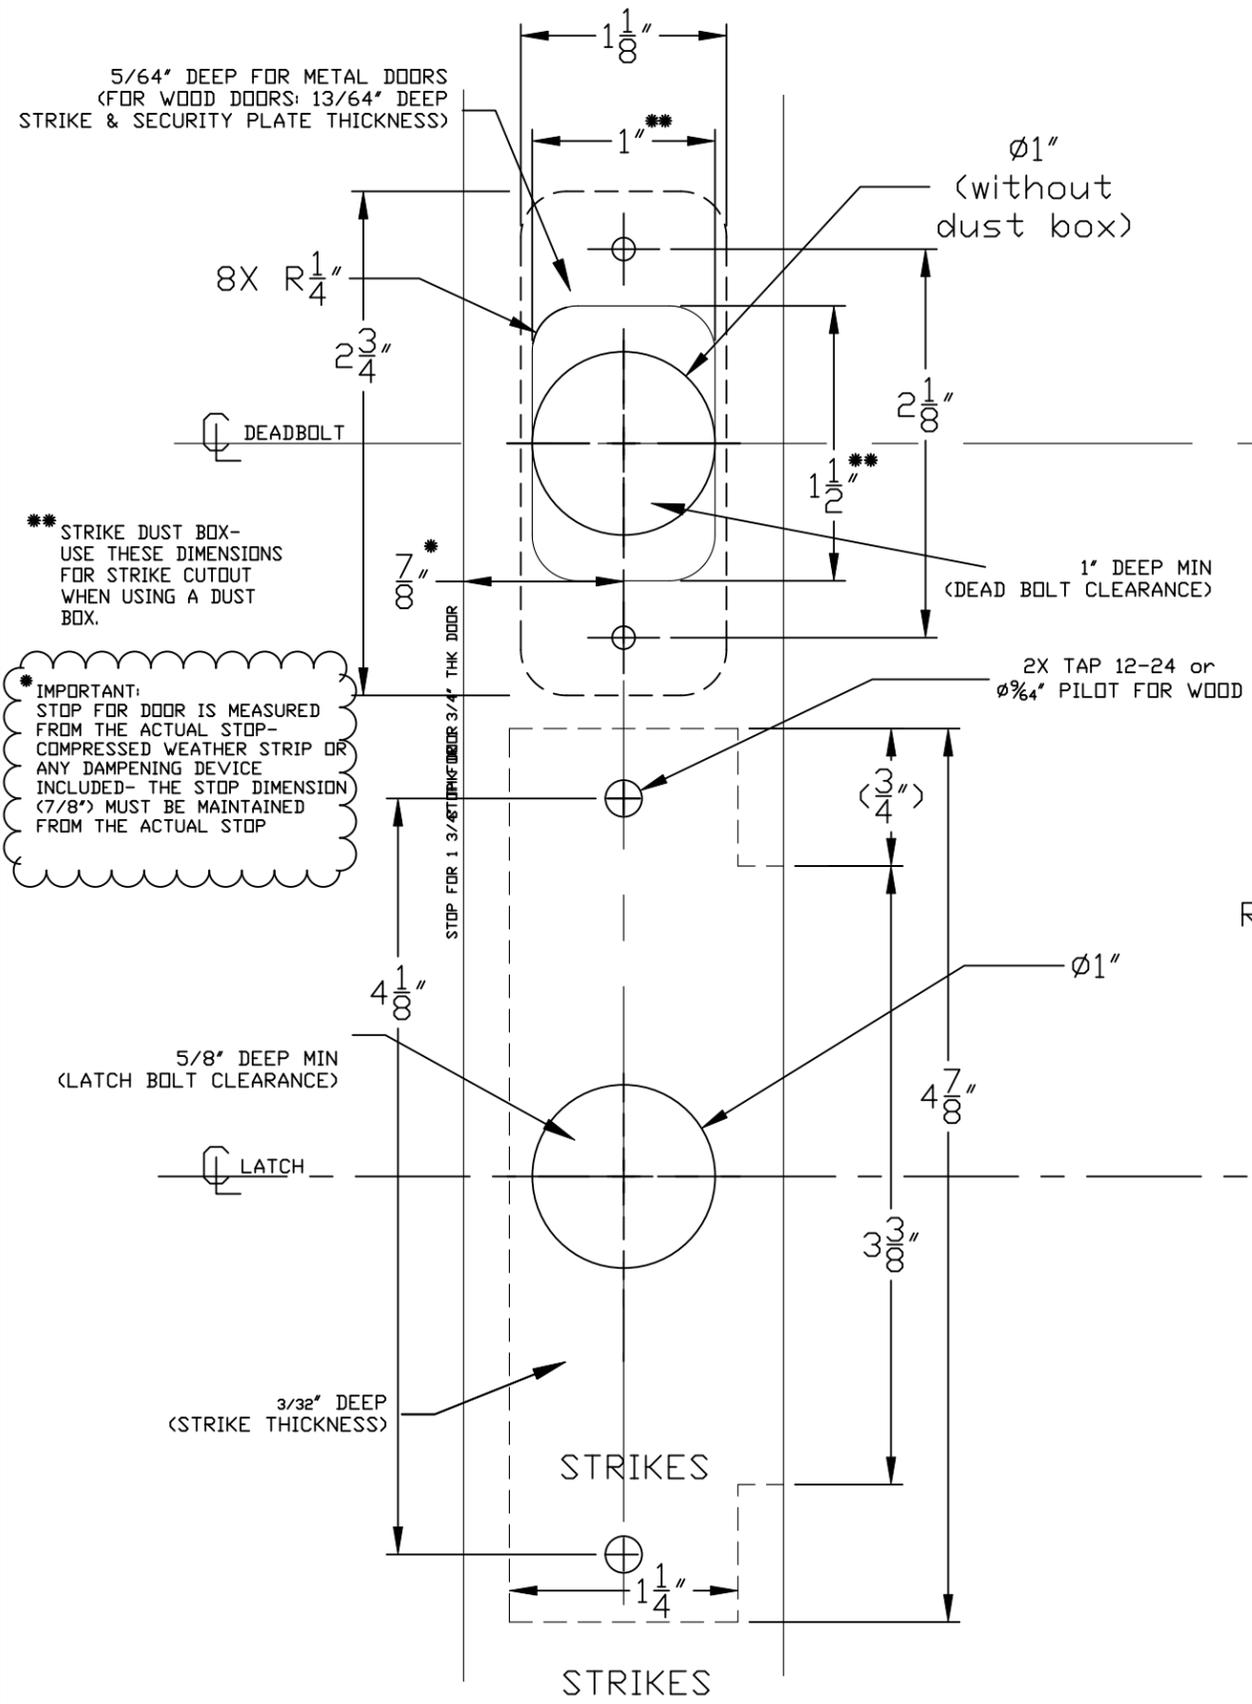

RESPONSIBILITY: Door and frame manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware.

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":

e-Genius Powered by Latch®
4" CTC Template ASA Strike

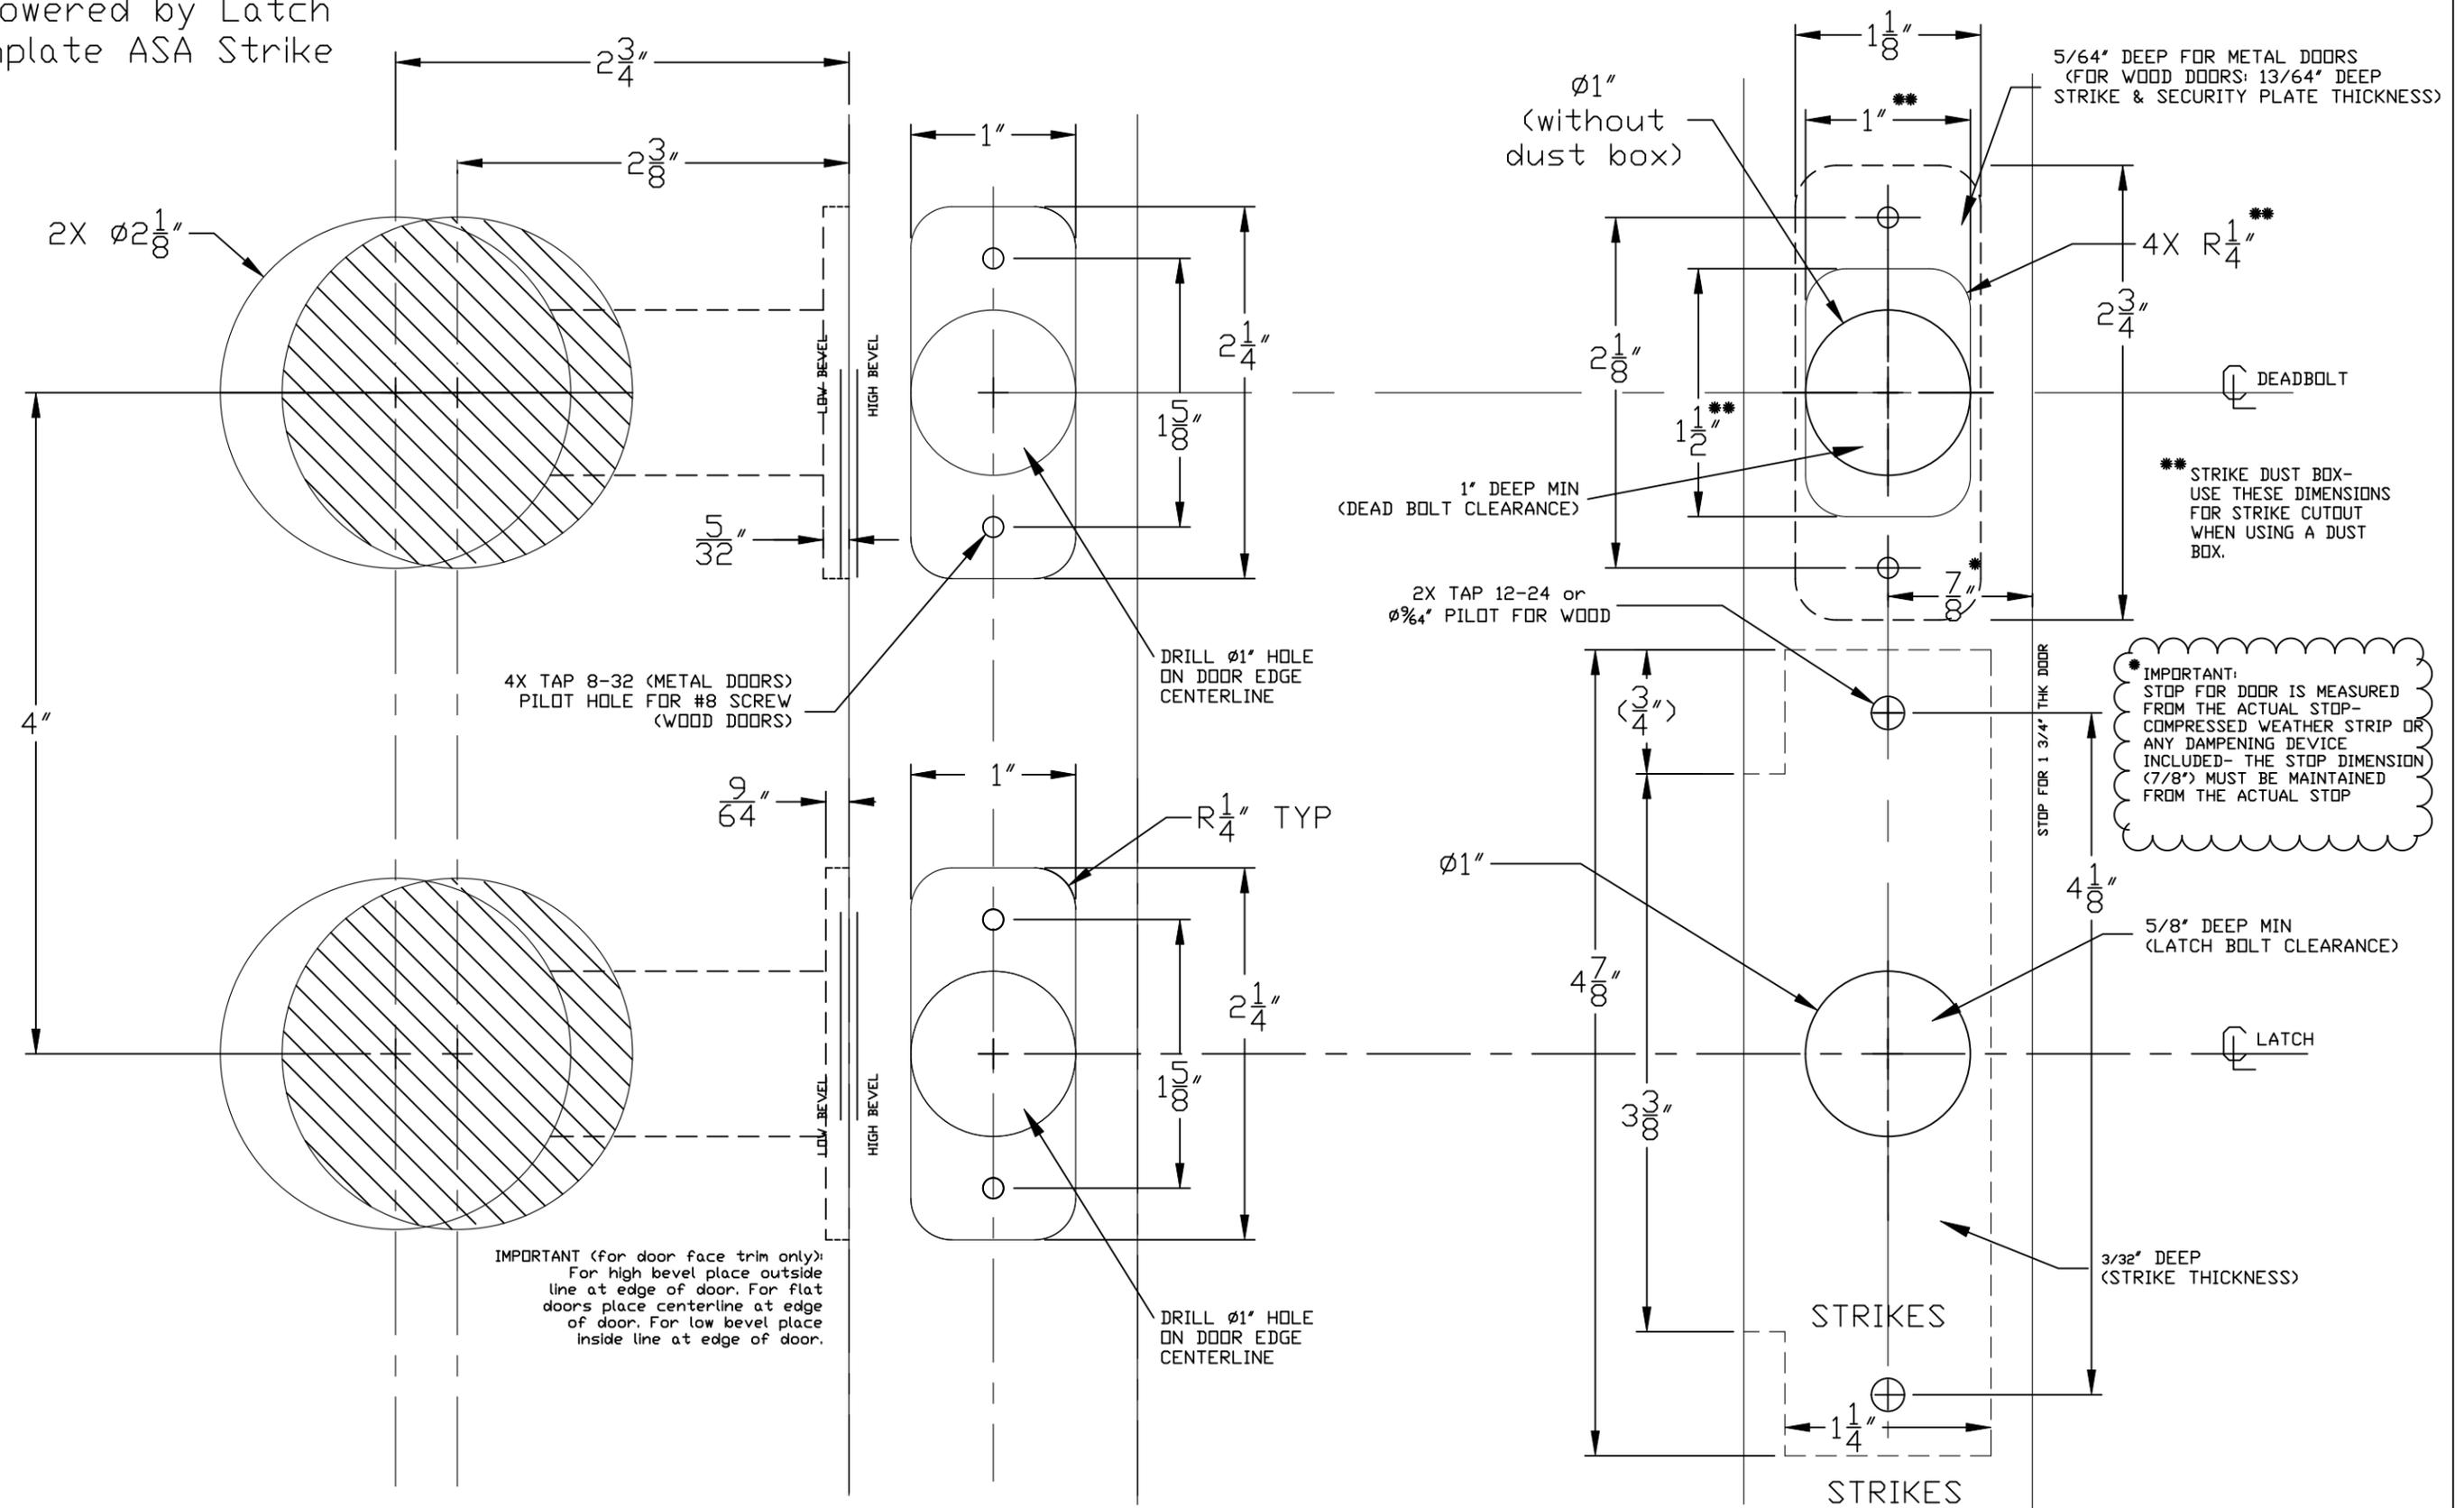

IMPORTANT (for door face trim only):
For high bevel place outside
line at edge of door. For flat
doors place centerline at edge
of door. For low bevel place
inside line at edge of door.

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":

RESPONSIBILITY: Door and frame manufacturers
are responsible for providing adequate construction or
reinforcements for proper installation of hardware.