
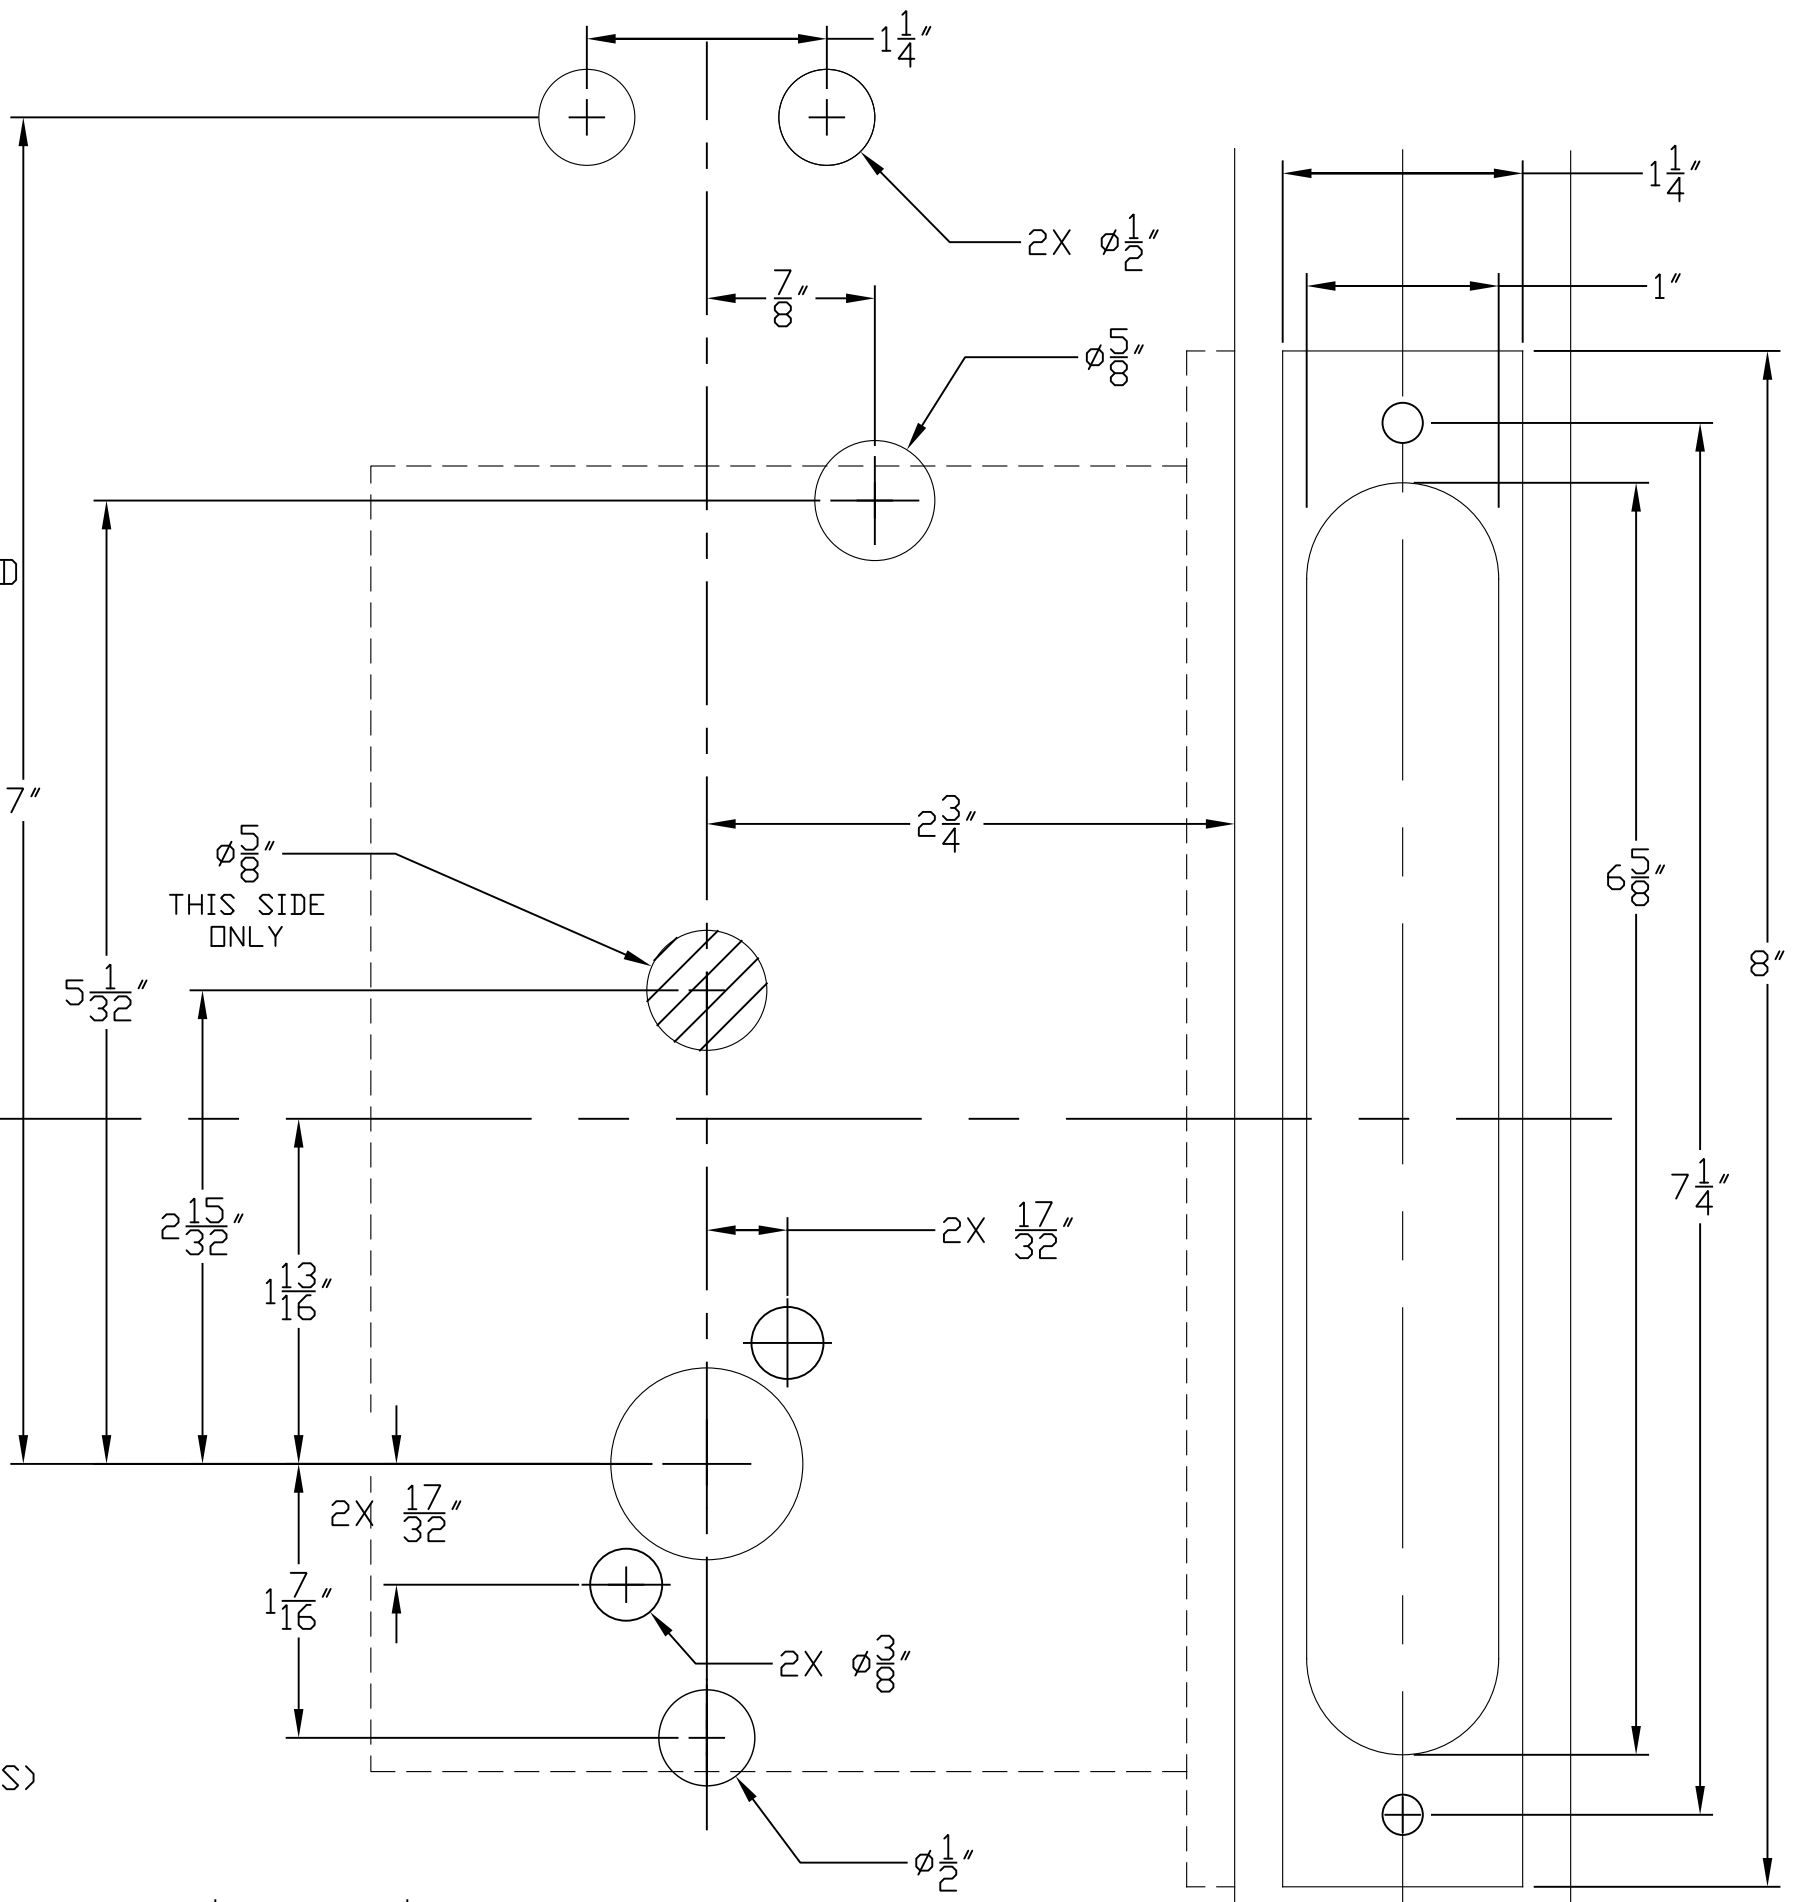


M3-TSAR Template

Right Hand/Right Hand Reverse

(Inside/Unlocked Side)

RESPONSIBILITY
Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

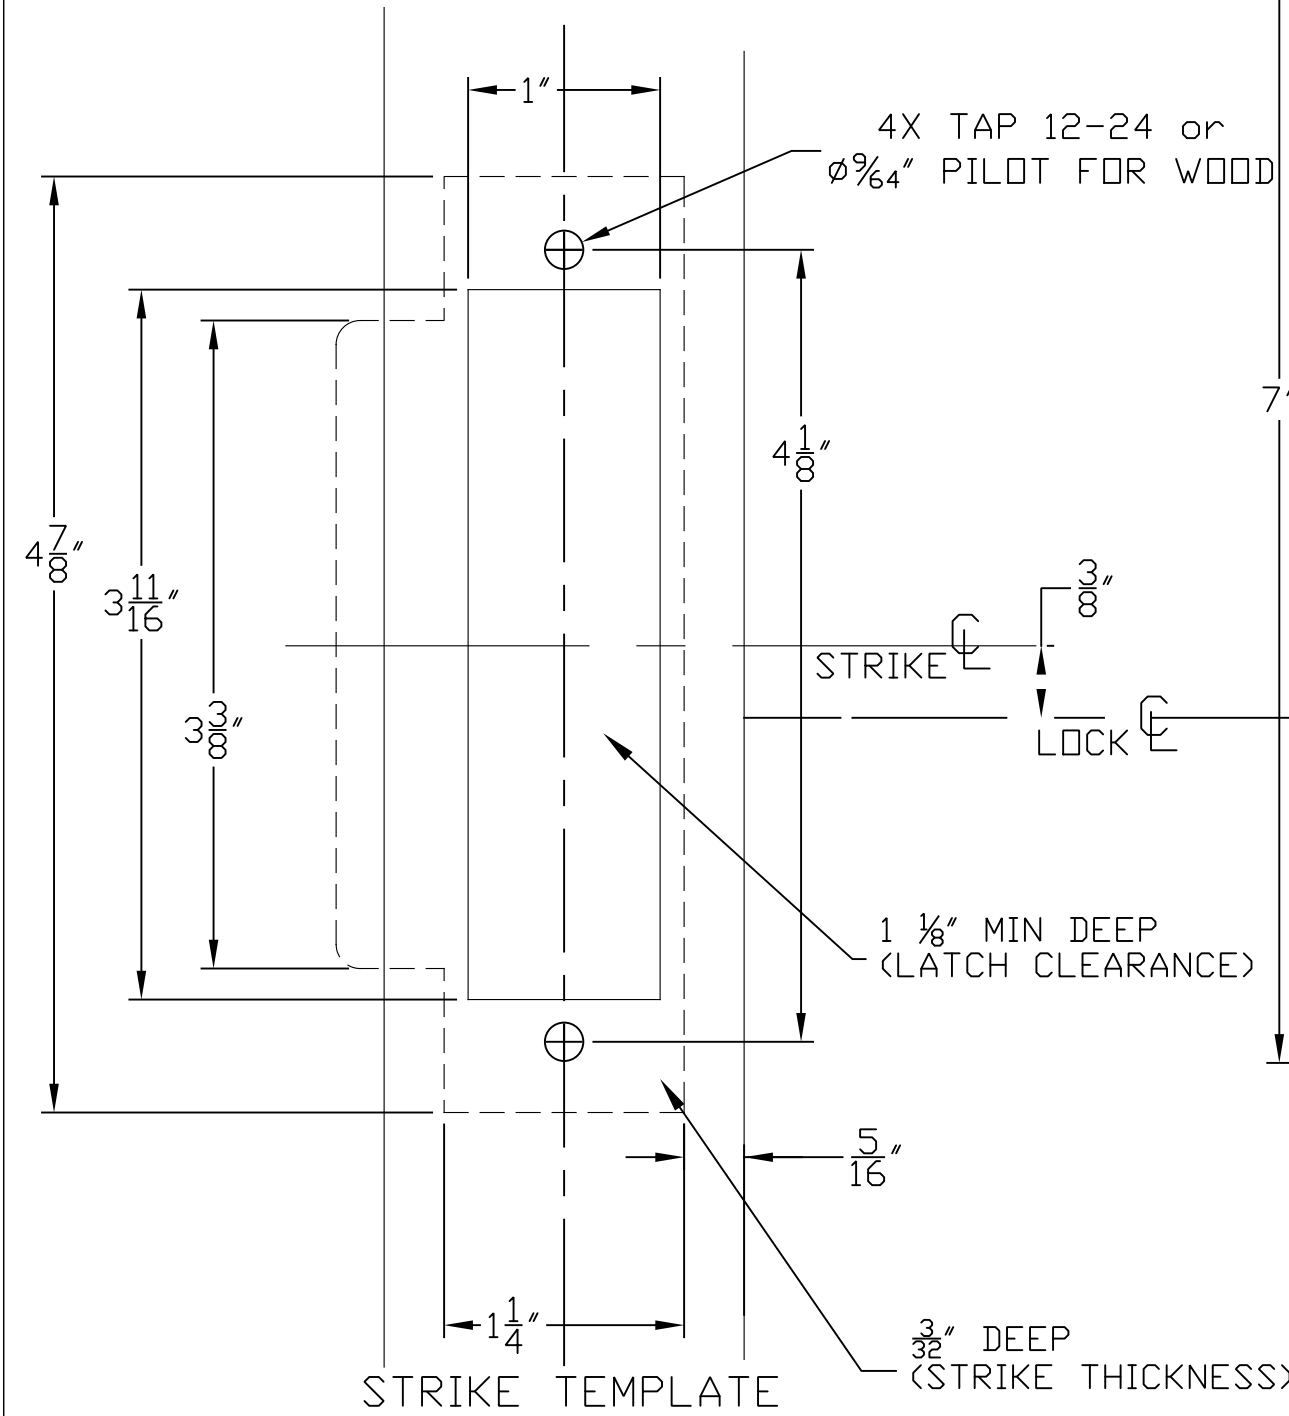


TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":

M3-TSAR Template
Right Hand/Right Hand Reverse
(Outside/Locked Side)


RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

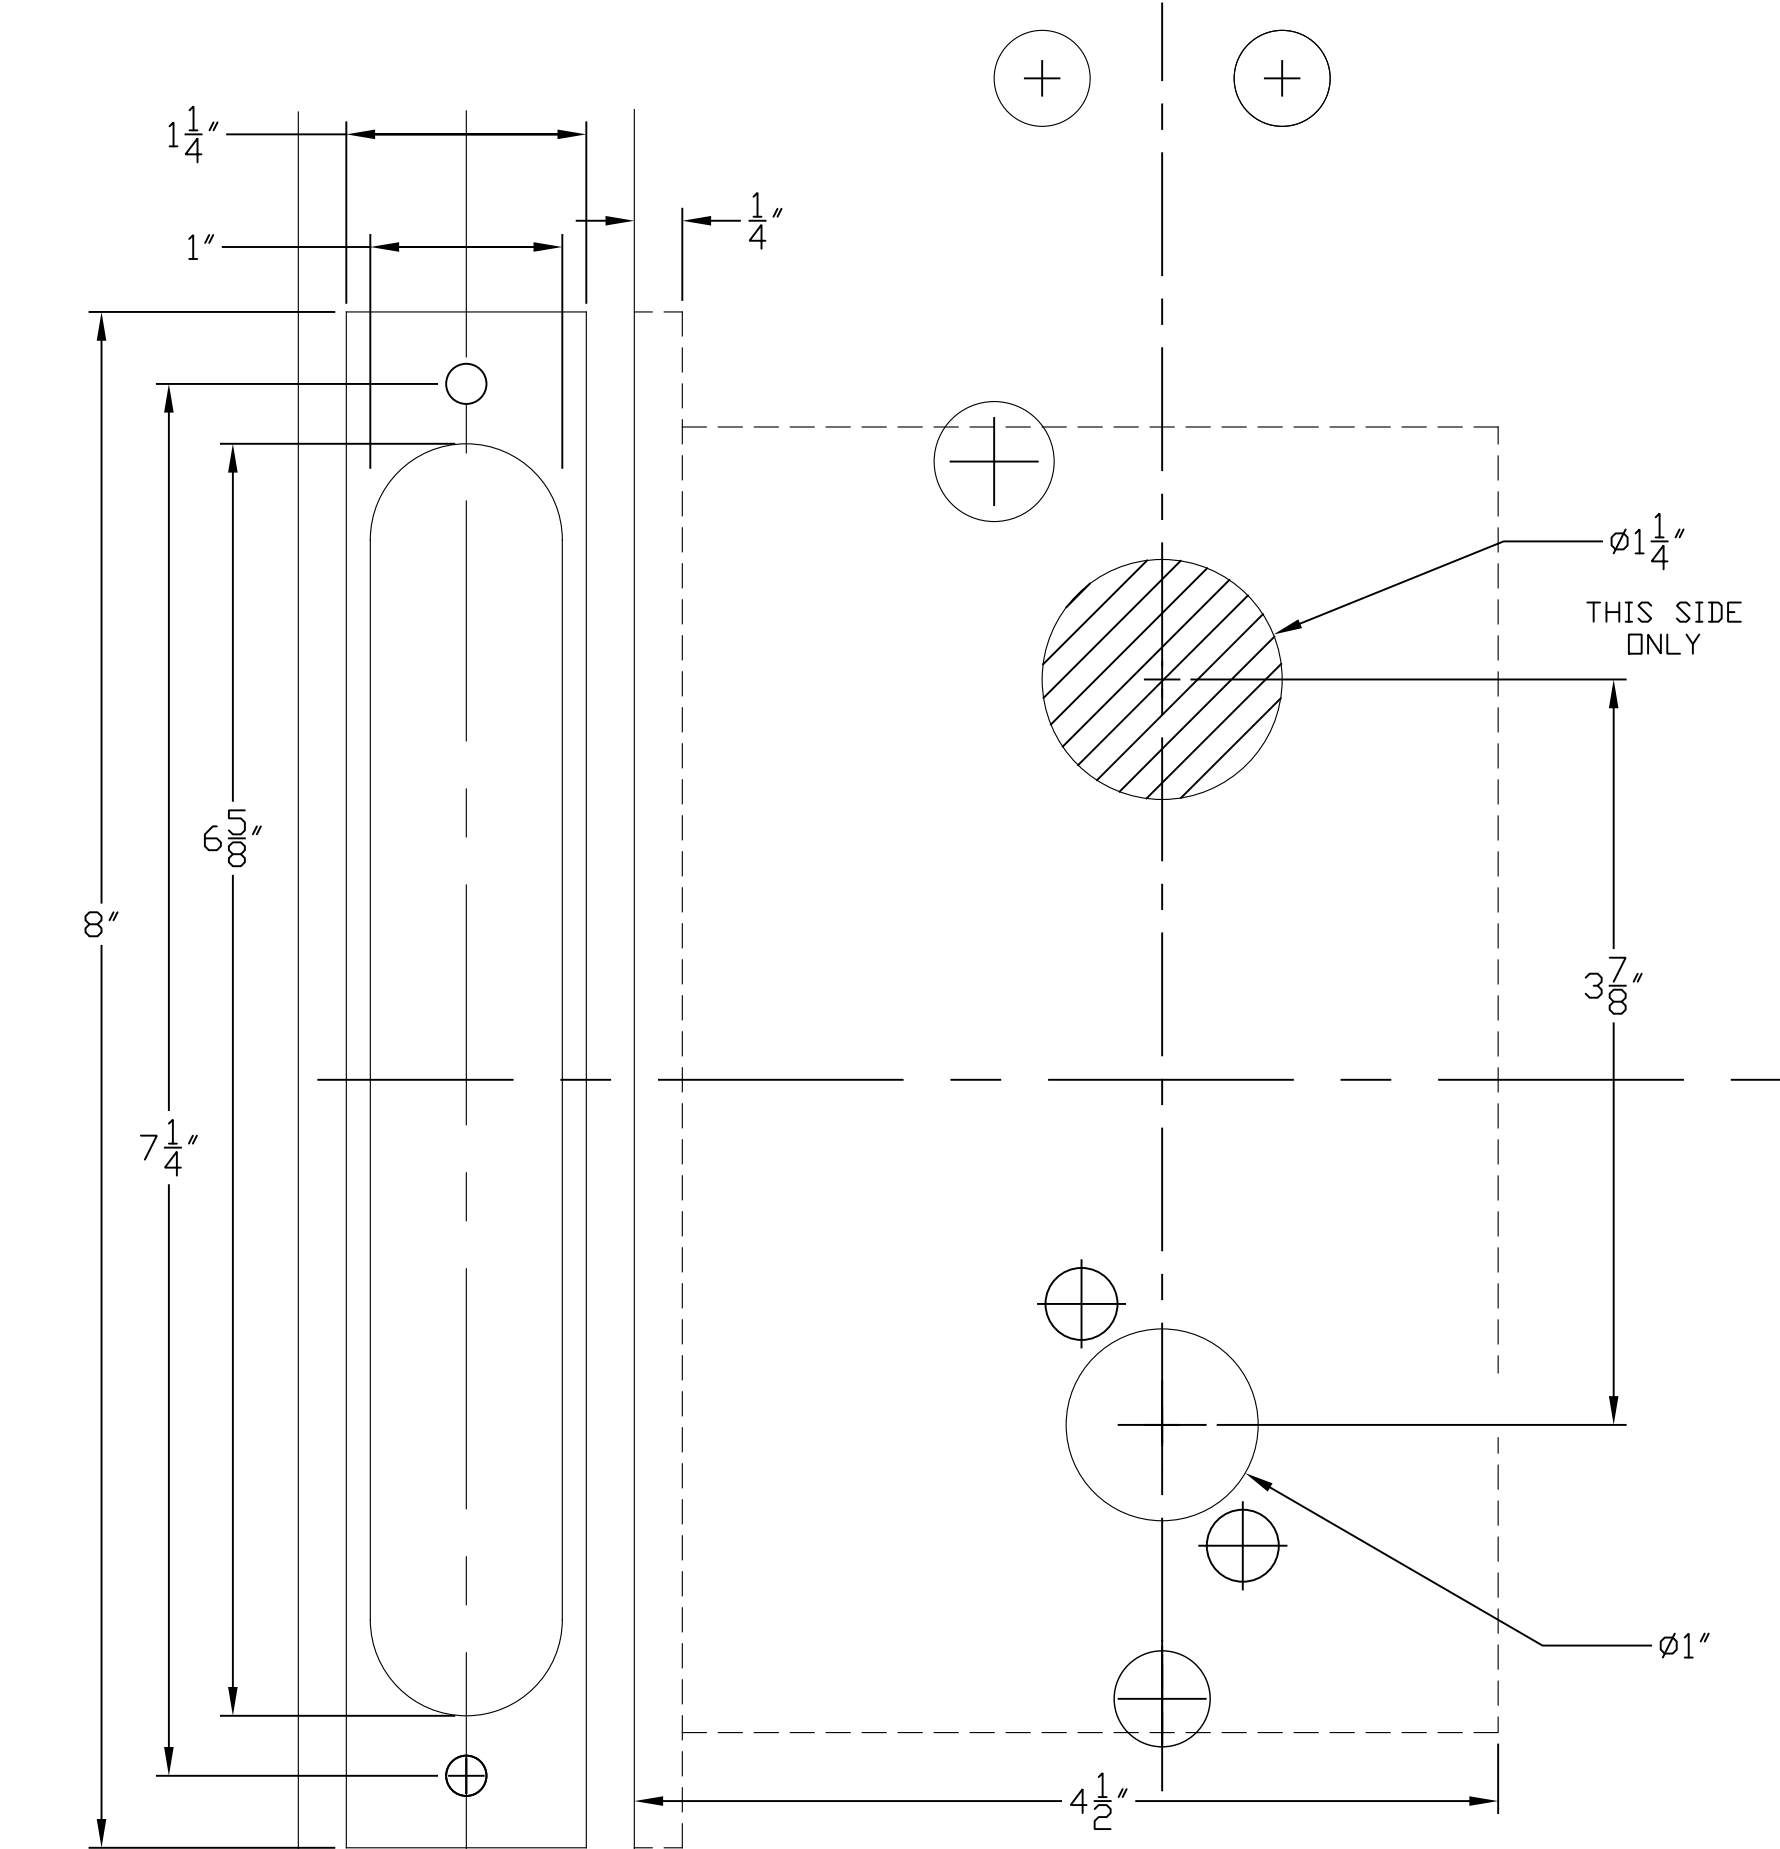

4X TAP 12-24 or
Ø 9/64" PILOT FOR WOOD

THIS SIDE ONLY

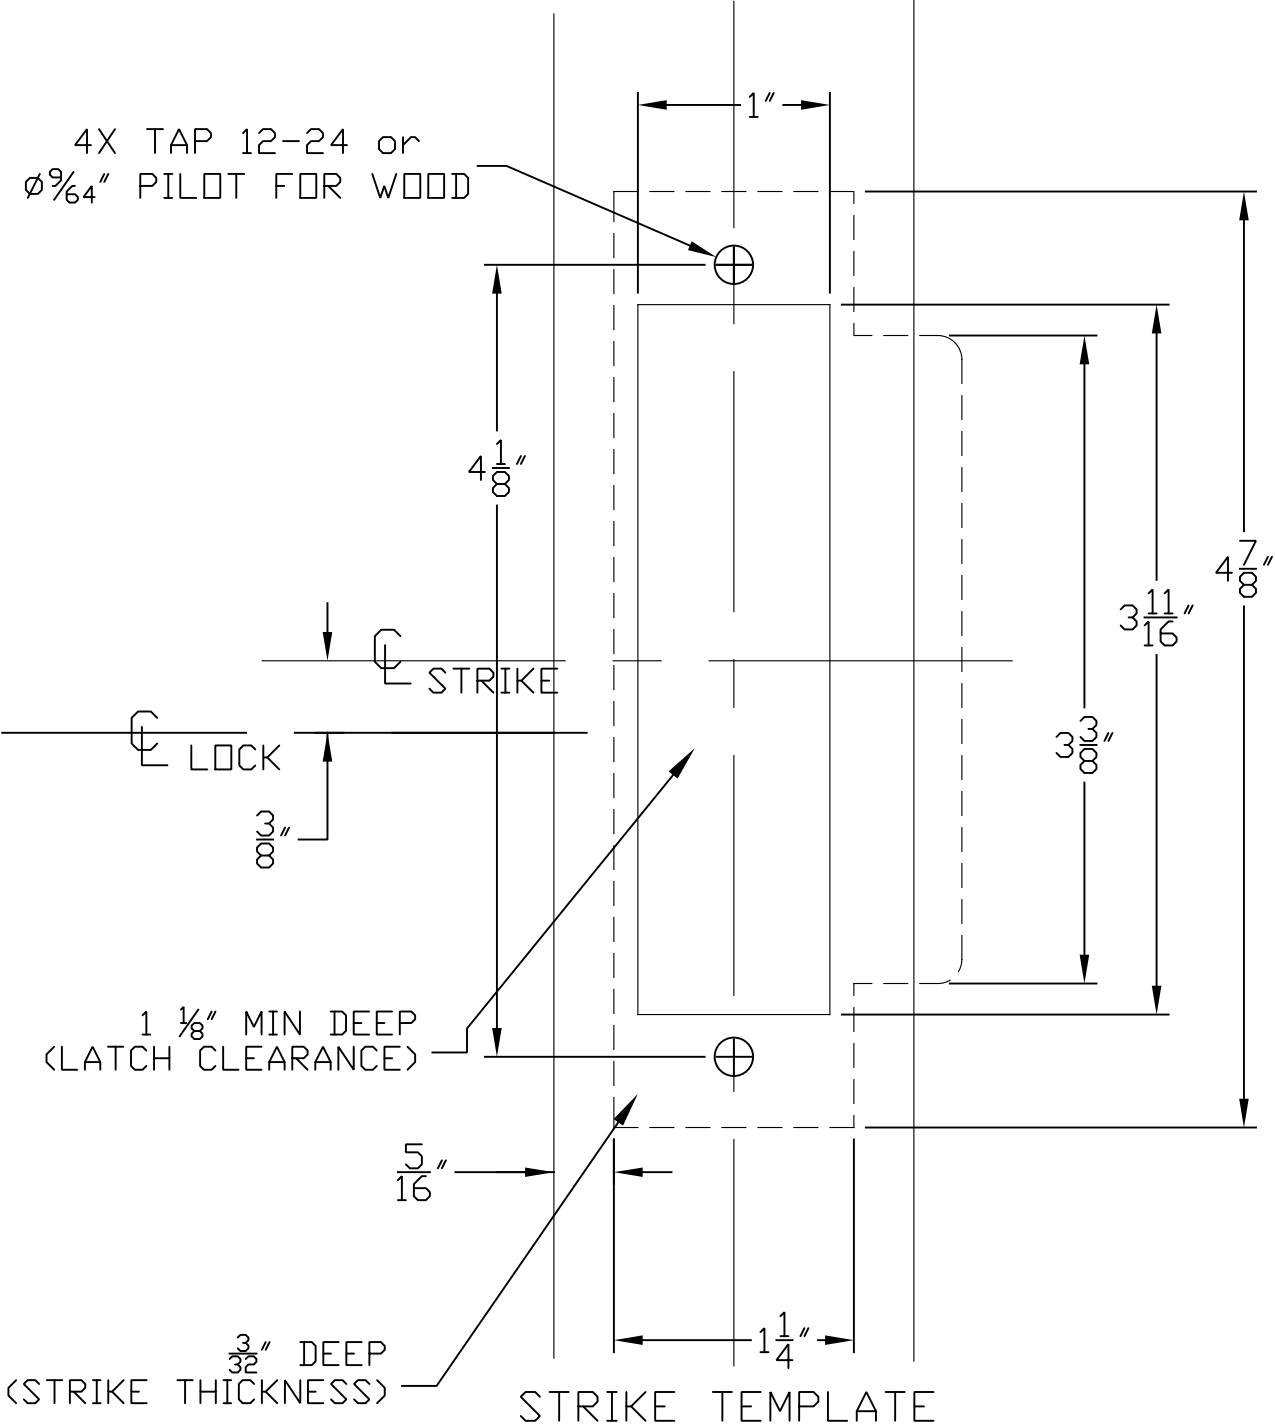

STRIKE TEMPLATE